



Installation instructions for part 95-6532B

Jeep Renegade 2015-up 95-6532B


KIT FEATURES

- ISO DDIN radio provision
- *Painted to match factory finish*



KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) (4) White panel clips

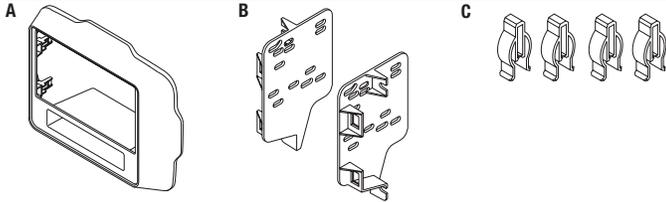

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • XSVI-6523-NAV

Antenna Adapter: • 40-EU55 Amplified antenna adapter

Table of Contents

Dash Disassembly	2
Kit Assembly	
– ISO DDIN radio provision	3

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Torx driver


CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.

REV.9/23/2015 INST95-6532B


Dash Disassembly

1. Unclip and remove the trim panel surrounding the factory radio. (Figure A)
2. Remove (4) T-20 Torx Screws securing the radio. (Figure B)
3. Unplug and remove the radio.
4. Cut shaded area at the top of the radio cavity. (Figure C)


Continue to kit assembly

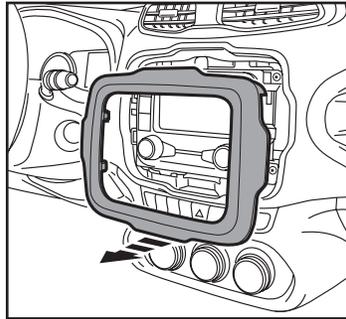

(Figure A)

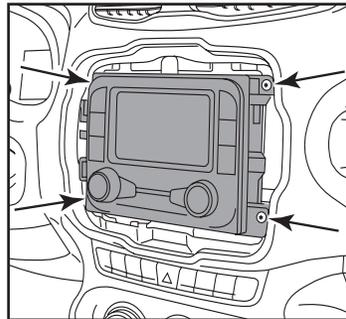

(Figure B)

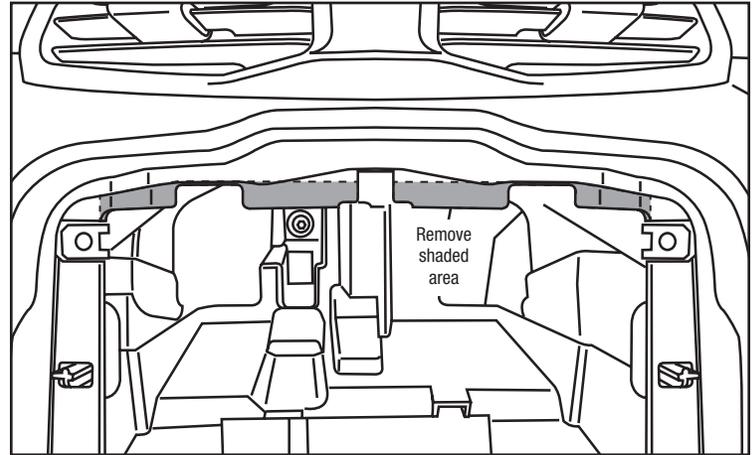


(Figure C)


Kit Assembly

ISO DDIN radio provision

1. Attach the (4) supplied *white panel clips* to the *radio housing*. (Figure A)
2. Attach the *radio brackets* to the radio using the screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Re-connect the negative battery terminal and test the radio for proper operation.
4. Reassemble the dash in the reverse order of disassembly using the 6532 *radio trim panel* instead of the factory radio panel.

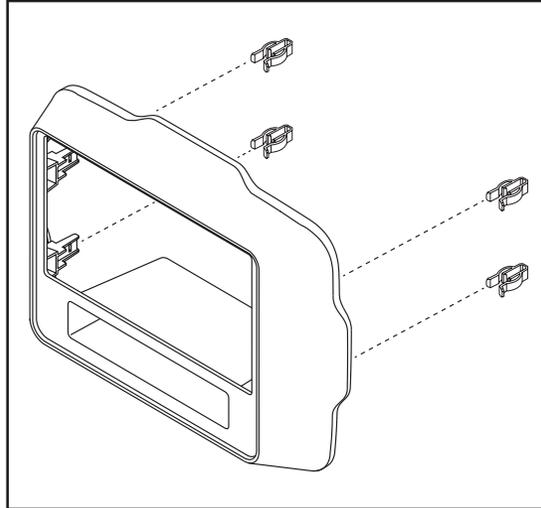

(Figure A)

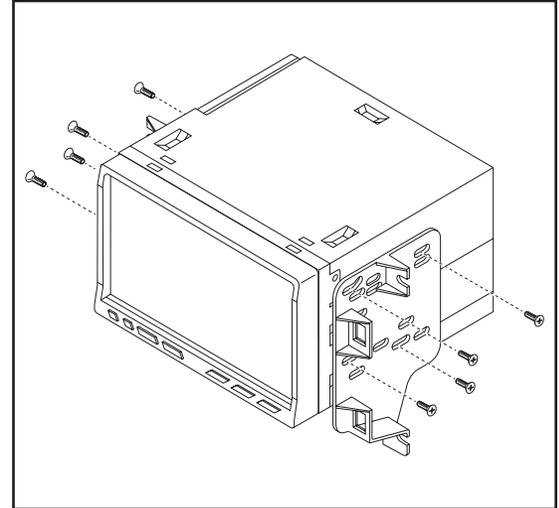

(Figure B)



Installation instructions for part 95-6532B



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.

REV. 9/23/2015 INST95-6532B



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians