



CT23VL08L

Double DIN Fitting Kit *for Volvo Vehicles*



IN THE KIT

- Double DIN Fascia Panel
- Radio Brackets

APPLICATION

Note: Application data is subject to change at any time

Volvo V70	2012 - 2016
Volvo XC70	2012 - 2016

Note: this fascia is suitable for left hand drive vehicles only. The dashboard will need to be modified for installation of a new unit.

FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Includes mounting brackets
- Finished in black to match vehicle dashboard

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are used during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

INSTALLATION GUIDE

DASH DISASSEMBLY

1.



Begin by using a panel removal tool to remove the fascia trim panel.

2.




Disengage the CD slot plastic housing by bending in the clips on the inside of the slot with a panel removal tool.

3.



With the CD slot panel removed, proceed to undo the 2x Torx screws highlighted.

4.

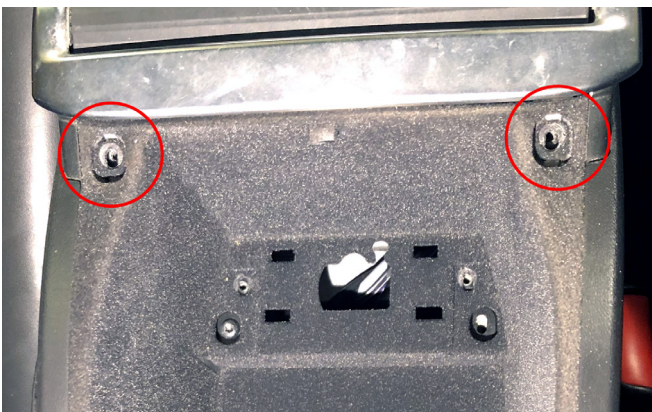

Open the centre console armrest and use the panel removal tool to help remove the rubber grommets that cover the following screws. Once uncovered, remove the 2x Torx screws.

INSTALLATION GUIDE

DASH DISASSEMBLY

5.



Located around the back of the main panel frame are 2x screws. These 2x Torx screws will also need to be removed.

6.




With the all of the screws undone, proceed to pull the main panel off of the dashboard, disconnecting the following connector in the process.

7.



Once the main panel is removed, undo the 2x bolts on either side of the main head unit. When done, remove completely whilst disconnecting all of the wiring.

8.

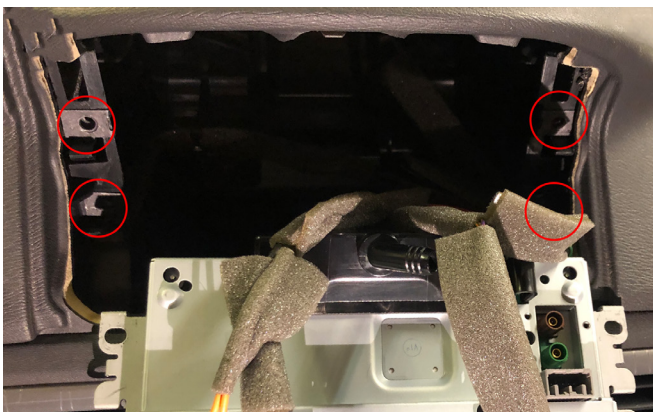

Remove the 4x screws that surround the top screen and remove completely whilst disconnecting all of the wiring.

Note: this top screen can go into storage as it will not be needed going forward.

INSTALLATION GUIDE

DASHBOARD MODIFICATION

9.



The highlighted section of dashboard frame will need to be filed down (roughly 2mm) in order for a new double DIN unit to sit in place correctly.

Note: this should be done purely for the fitment of the stereo. If the unit can already fit flush, then disregard this step.

When performing any modification to the vehicle, always ensure to measure where the stereo will sit and take due care when performing modifications to the vehicle.

Connects2 always promotes the use and expertise of professional installers. Connects2 will not be held responsible for any damage to the vehicle.

DASH ASSEMBLY

10.



Affix the brackets to the correct sides of the stereo. Then test fit into the dashboard. If the fit is too tight, repeat *Step 9* and repeat fit. When happy with the fitment, feed the wires up from the main cavity and connect the wiring to the stereo, screwing into place using the pre-existing screws.

11.



Once the stereo is secured, take the new fascia and place over the top. Reassemble the rest of the dashboard in reverse order to complete the installation.