

# Installation Guide

### Part No: CTSRN007.2 Renualt Can-Bus Steering Wheel Control Interface



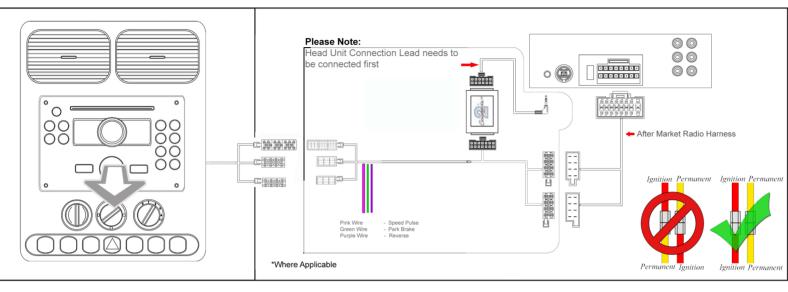

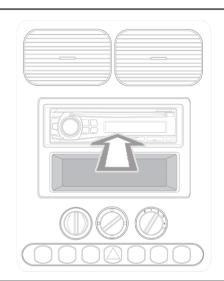

Vehicle Compatibility:

Renault Megane 2008 > Wind 2010 > Clio 2009 > Scenic 2009 >

ISO Connector Phone Button Support

#### Steering Wheel Control Functions



Track Up

Track Down



Source



Volume Up

Volume Down

<sup>\*</sup> Note All Dates are guide lines only as specifications of vehicles change

# Installation Guide

Part No: CTSRN007.2 Renualt Can-Bus Steering Wheel Control Interface



#### **User Guide**

Steering wheel control Interface





#### Setting the Clock (Vehicles with and without Clock setting buttons)

- 1. To enter clock setting mode, press and hold the 'AUDIO SOURCE' button on the steering wheel until the time displayed on the dash shows '00:00'
- 2. After one second, the display will return back to normal. This indicates you are now in clock setting mode.
- 3. Use Vol + and Vol on the steering wheel to adjust the time. Vol + changes hours and Vol changes minutes.
- 4. Once the time has been set, if neither button is pushed within five set the display with show 00:00 for one second to indicate clock setting n been left.