

Typ 3 463 04, 3 663 04

3 463 04 - Škoda Superb III. Combi 2015 →
 3 663 04 - Škoda Octavia III. RS Combi 2013-2017
 - Škoda Octavia III. RS Combi Facelift 2017→



ca ... 1 h

Milotec

Heckscheiben-Flaps • Flaps zadního okna • Rear window flaps • Flaps de lunette arrière


Montageanleitung • Montážní návod Fitting instructions • Instructions de montage

Technische Änderungen vorbehalten • Technická změna vyhrazena
 Subject to technical alterations • Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:

Gerät • Nářadí • Tools • Outils

A 1x L 1x R

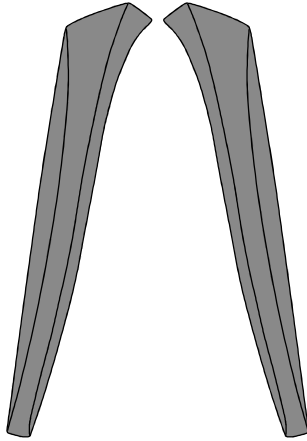


B 1x



C 1x



D 2x



E 1x



F 1x

Primer-Stix-/PU-Kleber-Hinweis
 Návod pro lepení (SIKA/PU)
 Note for Primer-Stix/PU-adhesive
 Note pour Primer-Stix/colle PU

G 1x

Montageanleitung
 Montážní návod
 Fitting instructions
 Instructions de montage



1. R+L

3M Surface Cleaner Sachet
 Pochette de Nettoyage
 Reinigungstuch
 Odmašťovací ubrousek

! 30°C
 ! 20°C

2. TEST R+L

! !

3. R+L

! !

4. R+L

! !

...20 min.

DINITROL 538 Plus
 CRASH!

! !

5. R+L

! !

Detail NO SIKA!

SIKAPRIMER-206

6. R+L

! !

...20 min.

PU - 50 ml

OK NO!

Detail NO PU!

ca 6 mm ca 6 mm

