




# Installation Manual Double DIN Kit

Part-No: 381023-06

- **BMW Mini (R56)**  
with automatic climate control

Compatible with double DIN devices

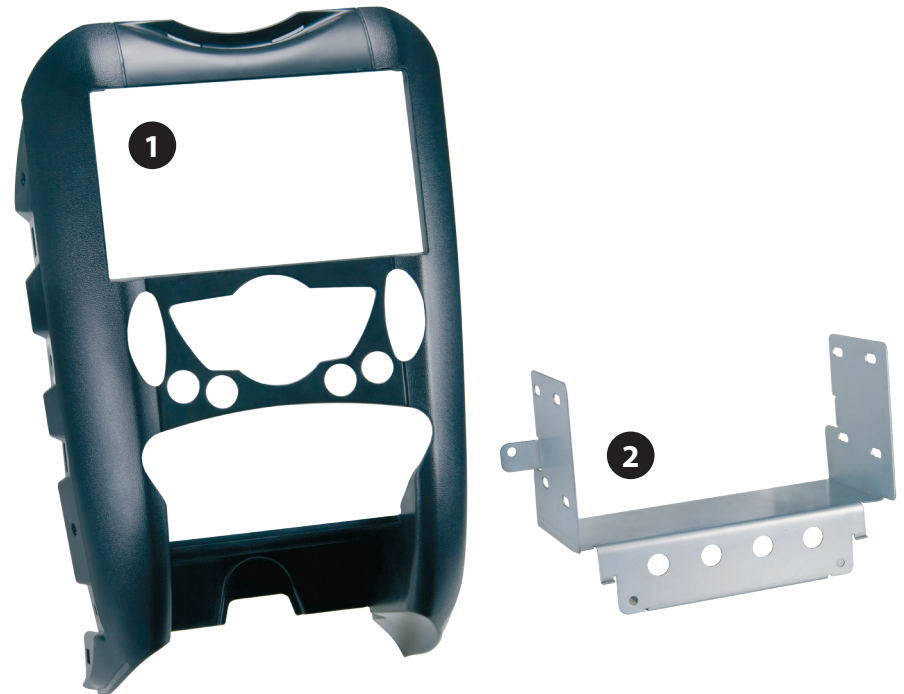

Double DIN Kit contents

- (1) Center console • (2) Mounting Bracket

## Installation Manual Double DIN Kit 381023-06




1. BMW Mini (R56) with automatic climate control

---

---

---

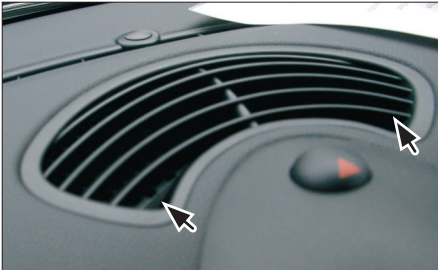


2. Clip out the air vent grill at the top of the dashboard

Remove 2 screws  
(see arrows)

---

---

---

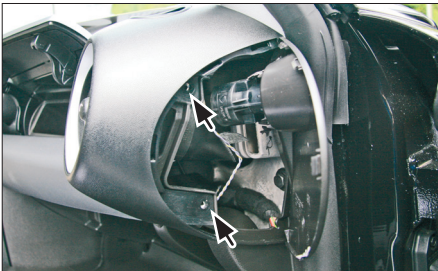


3. Unclip side panel

Remove 2 screws (see arrows)

---

---

---

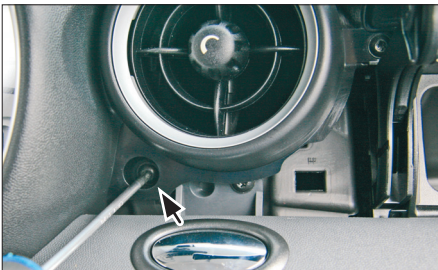

4. Open the glove box.  
Remove decor panels at both sides

Remove screw under air vent  
left and right side


---

---


---

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

## Installation Manual Double DIN Kit 381023-06

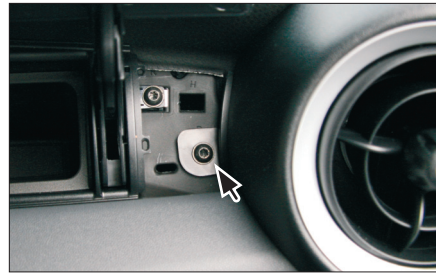

5. Remove screw beside air vent

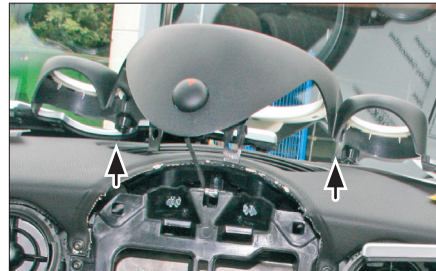

6. Remove cover of hazard light switch



7. Remove 2 screws of the rev counter

Remove decor panel




8. Remove 4 screws of the knee protector

proceed with step 9 on next page


## Installation Manual Double DIN Kit 381023-06



9. Open the lower glove box  
Remove 3 screws  
Remove knee protector

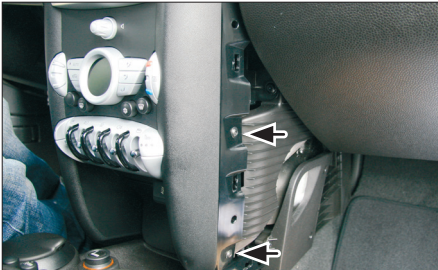


10. Unclip and remove side panels of the center console  
Remove 4 screws (2 at each side)  
Remove center console by pulling it towards your direction

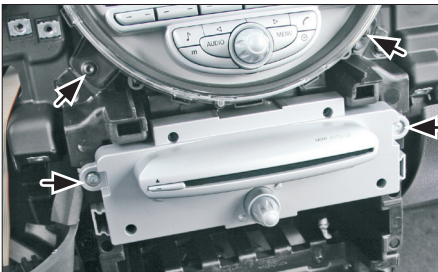

11. Remove 4 screws, see arrows  
Take out speedometer unit and head unit



12. Remove air condition control unit

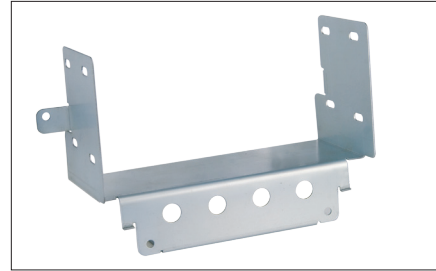

13. Fix the Double-DIN navigation with the mounting bracket



14. Connect all required circuit points  
Place the Double-DIN head unit at the dash board  
Fix it with 2 screws



15. Mount the air condition control unit  
Place new center console  
Install everything in reverse order to finish installation

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*